


# Braun reflex control AB 314 rsl

Type 3866

English  
Use Instructions  
Guarantee  
Service Centers

**BRAUN**

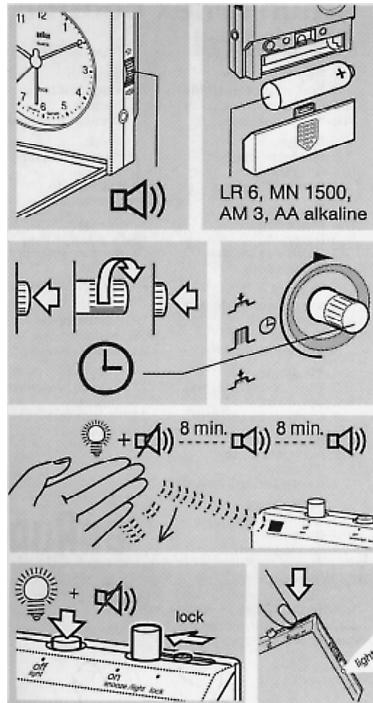

## English

Our products are engineered to meet the highest standards of quality, functionality and design. We hope you thoroughly enjoy your new Braun appliance.

## Function

To work properly, the clock should be used only at temperatures above freezing (0 °C).

## reflex control

Congratulation on your purchase of the AB 314 rsl reflex control alarm clock, designed by Braun to make mornings easier. After the third burst of the alarm tone the alarm can be stopped and the snooze function activated by a simply movement of a hand in the vicinity of the clock face (maximum operating distance 40 cm/16 in.). The movement of the hand in front of the clock should be diagonal and slightly above the green infrared sensor. At the same time the clock face is automatically illuminated. The alarm signal will start again 8 minutes later, and repeats for ca. 35 minutes. The alarm function can only be totally switched off by pressing the red button. By pressing either the red or the green button the light can be turned on, and the clock can thus be used as a flashlight.

## bcs

This clock has a «battery check system» (bcs), which constantly checks the battery's voltage level. When the battery's energy drops below a certain level, the second hand moves in 2-second intervals. This indicates that the battery should be replaced. When a new battery is inserted, the second hand will move in 2-second intervals for 8 seconds (4 times). If the second hand moves normally thereafter, the battery has enough voltage.



Do not dispose of empty batteries in the household waste. Take them to special local collection sites.

## Setting the time

Press the button at the back of the clock so that the button pops out. Only turn this button clockwise (direction of the arrow).

**Important: After setting the time, press the button back into the housing.**

## Alarm function

To avoid accidentally switching on the alarm, the lock switch should be turned on when travelling: press the switch marked «lock» all the way to the end, in the direction of the «on» button.

Subject to change without notice.

**CE** This product conforms to the EMC-Requirements as laid down by the Council Directive 89/336/EEC.

## Guarantee

This product is guaranteed for 1 year from date of purchase against material and/or workmanship defects. These will be eliminated either by repairing or exchanging the appliance as we may choose. All other claims, including for damages, are excluded. Service under the guarantee does not affect its expiry date.

Claims only valid in countries where product is officially sold and if accompanied by a stamped and dated guarantee card.

Claims arising out of the sales contract with the vendor are not affected by this guarantee.

## For UK only:

This guarantee in no way affects your rights under statutory law.

## Braun Gold Seal Service

To maintain your unit at peak performance it is strongly recommended that you have it checked every two years by an approved Gold Seal Service Centre.

In the unlikely event that you experience a problem with this product, Braun (UK) Ltd. promise to resolve the problem within 5 days (excluding weekends) of receipt by an approved Gold Seal Service Centre. The method of resolution of the problem will be at Braun (UK) Ltd's discretion.

U.K. / Northern Ireland / Channel Islands / Isle of Man:

To contact your nearest Gold Seal Service centre please telephone this number: 0990 143 223.

Eire: Gavins Electronics Ltd.  
83 Lower Camden St  
Tel. Dublin 4 75 71 09