

BRAUN

ProStyle

SI 8510

SI 8512

SI 8570




Type 4695

Type 4696

Type 4697

ProStyle

 Vario

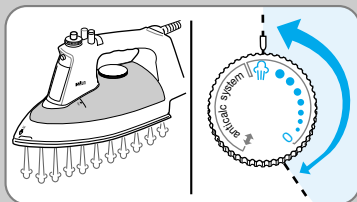

SI 8510




SI 8512




SI 8570



 
Extra

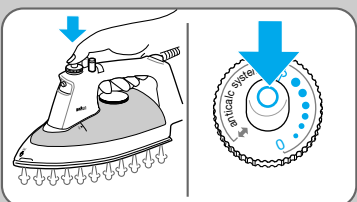


Power Shot

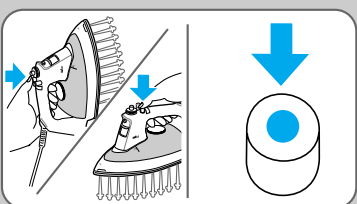 

Jet

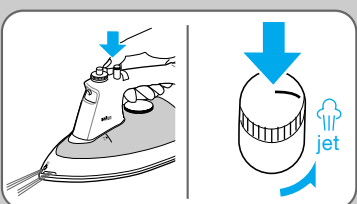 

Spray

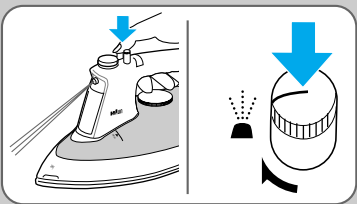 

Our products are engineered to meet the highest standards of quality, functionality and design. We hope you enjoy your new Braun steam iron.

Notice: Remove the label, if any, from the sole plate before first use.

Important Safeguards

- Before using the iron, read the use instructions completely. Keep the use instructions during the entire life of the iron.
- Make sure your voltage corresponds to the voltage printed on the iron. Connect the iron to alternating current only.
- Always unplug the iron before filling with water. Always pull the plug, not the cord. The cord should never come in contact with the hot objects or the sole plate.
- Never immerse the iron in water or other liquids.
- During ironing pauses, always place the iron upright on its heel rest. Unplug it when leaving the room, even if only for a short time.
- Keep the iron away from children, especially when using the «jet» function. Electric irons combine high temperatures and hot steam that could lead to burns.
- Never iron or dampen clothes while wearing them.
- Check the cord regularly for possible damage.
- If the appliance (including cord) shows any defect, stop using it and take it to a Braun Service Centre for repair.
- Faulty or unqualified repair work may cause accidents or injury to the user.
- Braun electric appliances meet applicable safety standards.

A Description

- 1 «jet» of steam openings
- 2 Water tank opening
- 3 Spray nozzle
- 4 Power shot button
- 5 2-function button: spray/«jet» of steam
- 6 Steam regulator
- 7 Extra steam button
- 8 Pilot light
- 9 Temperature selector

B Before starting off

- This iron is designed for tap water. If you have extremely hard water, we recommend to use a mixture of 50% tap water and 50% distilled water. Fill the water tank to «max» marking. Never use distilled water exclusively. Do not add any additives (e.g. starch).
- Keep the iron in the upright position and connect it to the mains. Select the temperature according to the ironing guide on the heel rest of the iron or on the label in your garments.
- The pilot light goes off when the desired temperature is reached (after approx. 1½ min.).

C Ironing

Vario steam

You can increase and reduce the quantity of steam by turning the steam regulator. The steam regulator and the temperature selector have to be set within the red range.

Notice: While ironing, do not turn the steam regulator beyond the red range. For extra steam, power shot and «jet» of steam, the temperature selector must be set within the continuous red range. These functions can even be activated when dry ironing.

Extra steam

Press the extra steam button (7) for max. 3 seconds, but not more often than 4 times per minute.

Power shot

Press the power shot button (4) in intervals of at least 5 seconds.

Frontal «jet» of steam

Turn the 2-function button (5) to «jet» as far as it will go, then press it in intervals of min. 5 seconds.

Spray function

Turn the 2-function button (5) to the symbol and press.

Dry ironing

Set the steam regulator on position «O» (= steam off).

Notice: Prior to ironing, press the power shot and «jet» buttons 3 to 4 times to activate them. These functions can be used for steaming hanging clothes.

D After ironing

Unplug the iron. To prolong the life of the iron, empty the water tank. Store the cool iron in a dry place always standing on its heel rest.

E Maintenance and cleaning

To clean the sole plate, use steel wool. Never use a scouring pad, vinegar or other chemicals.

F Cleaning the anticalc valve

The anticalc valve on the steam regulator has to be decalcified regularly (e.g. whenever steam development is insufficient). For this, the water tank has to be empty.

Removing the steam regulator with the anticalc valve

Turn the steam regulator clockwise to the double arrow at the end of the anticalc section and it will lift. Pull it out vertically. Do not touch the anticalc valve at its lower end. Immerse the anticalc valve in vinegar (not vinegar essence) or lemon juice for minimum 30 minutes. Brush off remaining residues and rinse under running water (fig. F 1-5).

Re-inserting the steam regulator

To re-insert the steam regulator follow fig. 6 and 7.

Notice: The iron must not be used without the steam regulator.

G Decalcifying/anticalc system

In order to clean the steam chamber from residues, decalcify it as shown in fig. G 1-11.

Caution: Hot water and steam will come out from the sole plate when the steam regulator is turned clockwise into the anticalc area.

Wait for the sole plate to cool down, then clean it as described above.

Then refill the tank with water, heat up the iron and press the power shot button 4 times to rinse the iron before ironing (G 12-13).

Do not use commercial decalcifiers, they may damage the iron.

H Trouble-shooting guide

Problem	Remedy
Drops coming out of the steam vents	Turn the steam regulator anti-clockwise to reduce the steam or turn it off. Take longer intervals when pressing the «jet», power shot or extra steam button.
«jet» of steam does not function	Press the «jet» button several times.
Less steam develops or no steam at all	Check water level. Clean the anticalc valve.
Calcium particles coming through the steam vents	Decalcify the steam chamber.

Subject to change without notice.

This product conforms to the EMC-Requirements as laid down by the Council Directive 89/336/EEC and to the Low Voltage Regulation (73/23 EEC).

Guarantee

Your Braun product comes complete with a 1 year guarantee that commences on the date of purchase. For you to obtain service within the guarantee period you must retain your sales receipt as proof of purchase.

Please ensure you store your sales receipt in a safe place.

Within the guarantee period we will repair, free of charge, any defects in the appliance resulting from faults in materials or workmanship, but may, at our discretion, choose to exchange specific parts or replace the complete appliance.

This guarantee does not cover: damage arising from improper use, normal wear and defects that have a negligible effect on the value or operation of the appliance.

The guarantee becomes void if repairs are undertaken by unauthorised persons and if original Braun parts are not used.

The guarantee is valid for 12 months from the original date of purchase as per your sales receipt. The guarantee on any repairs or exchanges made under guarantee expires at the end of this period.

For UK only:

This guarantee in no way affects your rights under statutory law.

Braun Gold Seal Service

To maintain your appliance at peak performance it is strongly recommended that you have it checked every two years by an approved Gold Seal Service Centre.

In the unlikely event that you experience a problem with this product, Braun (UK) Ltd. promise to resolve the problem within 5 days (excluding weekends) of receipt by an approved Gold Seal Service Centre.

UK including Northern Ireland, Channel Islands and Isle of Man:
To contact your nearest Gold Seal Service Centre please telephone this number:
0870 514 3223.

Ireland: Gavins Electronics Ltd.
83 Lower Camden St.
Dublin
Call Dublin (01) 4 75 71 09



Helpline

Should you require any further assistance please call

Braun (UK) Customer Relations on

GB 0800 783 70 10

IRL 1 800 509 448

Internet:

www.braun.com